

Operating Manual for Digital Lock System



Starting Button

Ending Button

Display section

- Thank you for choosing the Digital lock system designed. In order to make the best use of this digital lock, please observe the following instruct.

TO INSTALL THE BATTERIES

- 1) Turn Keypad to the left to expose the battery compartment on the back of the lock.
- 2) Insert in **4** quality **AA** batteries into the keypad and reinstall battery cover.

HOW TO OPEN THE SAFE FOR THE FIRST TIME (Factory set code : 1234)

- STEP 1 Press the "*" button ("CODE" on screen)
- STEP 2 Press in the **factory set code** (ex : 1234)
- STEP 3 Press the "#" button ("OPEN" on screen)
- STEP 4 Turn the safe handle or turn the key to open the safe.

"* → 1234 → #"

TO CHANGE THE MASTER CODE (Always perform this procedure with the door open)

- STEP 1 Press the button (black or red) located on the inside door panel ("EnTEACd" on screen)
- STEP 2 Enter **New personal code** 4-8 digits long
- STEP 3 Press the "#" button ("SUCCESS" on screen)

"M → New personal code → #"

※ Just a moment !

Please kindly try the new personal code once again with the door open before closing the door.

HOW TO SET AND CHANGE ADDITIONAL USER CODES (Note : You must know master code to set additional user codes)

- STEP 1 Press the "*" button ("CODE" on screen)
- STEP 2 Press the "#" button ("EnTERCd" on screen)
- STEP 3 Press in the **master code**
- STEP 4 Press the "#" button ("0-ChAngE" on screen)
- STEP 5 Press the number "1" button ("Cn-1" on screen)
- STEP 6 Press the user number you want to set or change user number **2 thru 5** are your options. ("EnTERCd" on screen)

STEP 7 Press in the **new password** (must be 4-8 digits long)

STEP 8 Press the "# " button ("**RECOdE**" on screen)

STEP 9 Press in the **new password again**

STEP 10 Press the "# " button ("**SUCCESS**" on screen)

" * → # → **Master code** → # → 1 → **press the number to set or change → new password** → # → **new passowrd again** → # "

TO DELETE A USER PASSWORD

STEP 1 Press the "* " button ("**COdE**" on screen)

STEP 2 Press the "# " button ("**EnTERCd**" on screen)

STEP 3 Press in the **master code**

STEP 4 Press the "# " button ("**0-ChAngE**" on screen)

STEP 5 Press the number "2 " button ("**dn-2345**" on screen)

STEP 6 Press the user number you want to delete 2-5 ("**1-y 0-n**" on screen)

STEP 7 Press the number "1 " button to confirm you want to delete ("**SUCCESS**" on screen)

Note : If yo change your mind and decide you do not want to delete, you can press the number "0 " button instead of the number 1 will cancel.

" * → # → **Master code** → # → 2 → **press number button to delete** → " 1 "(delete) or " 0 " (cancel) "

HOW TO CHANGE DISPLAY MODE

STEP 1 Press the "* " button ("**COdE**" on screen)

STEP 2 Press the "# " button ("**EnTERCd**" on screen)

STEP 3 Press in the **master code**

STEP 4 Press the "# " button

STEP 5 Press the number "7 " button ("**dSP HIdE**" on screen)

Note : 1) After pressing the number "7 " button, all passwords will show as a "*****" on screen.

2) To change it back, repeat the same steps!

" * → # → **Master code** → # → 7 "

THE TIME FOR CHANGING BATTERY

1. The numbers on screen may not be clear !

2. Door may not open in spite of exact code being entered !

LOCK OUT MODE

If you put in the wrong code three times, the safe will go into " lock out mode." ("**HOLd**" on screen)

If this happens, leave the batteries in wait 3 minuts or until the locks stops beeping and then you can attempt to open again.

(If you remove the batteries while it is in " lock out mode ", the time will reset again when new batteries are inserted.)